

# RS-EB-S2 Standard jumper settings with power over X1 or X2

